

Honeywell Barcodescanner for **nmvs** connect

Easy Scanner Configuration

For customers with HONEYWELL 2D barcode scanners we offer a special service. It takes **just 3 configuration scans** to setup your scanning device. After only a few seconds all FMD datamatrix codes will be ready for **nmvs** ! Configuration can't be easier...!
connect




Default Mode

Following settings are done with this configuration code:
Sets the scanner back to the Default Mode



KBD ALT-Mode

Following settings are done with this configuration code:
USB-KBD ALT-Mode (Keyboard), Disable all default codes & enable only Datamatrix, Enable Normal & Invers Datamatrix, Enable Max Decoding Time, Delete EOT Character

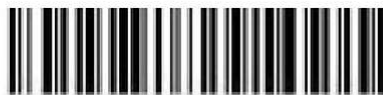

CR-Mode

Following settings are done with this configuration code:
Adds a Carriage Return (CR) suffix to the scanned data.